Coast Guard, DHS § 117.984

### §117.966 Galveston Channel.

The drawspan for the Pelican Island Causeway Drawbridge across Galveston Channel, mile 4.5 of the Galveston Channel, (GIWW mile 356.1) at Galveston, Texas, must open on signal; except that, from 6:40 a.m. to 8:10 a.m., 12 noon to 1 p.m., and 4:15 p.m. to 5:15 p.m. Monday through Friday except Federal holidays, the drawspan need not be opened for passage of vessels. Public vessels of the United States must be passed at anytime.

[USCG-2001-10881, 71 FR 70312, Dec. 4, 2006. Redesignated by USCG-2011-0257, 76 FR 31837, June 2, 2011]

#### §117.967 Greens Bayou.

The draw of the Port Terminal Railroad Association railroad bridge, mile 2.8 at Houston, shall open on signal if at least four hours notice is given. The draw shall open on signal for three hours thereafter for returning downbound vessels.

# §117.968 Gulf Intracoastal Waterway.

The drawspan for the Port Isabel Drawbridge, mile 666.0, must open on signal; except that, from 5 a.m. to 8 p.m. on weekdays only, excluding federal, state, and local holidays, the drawspan need open only on the hour for pleasure craft. The drawspan must open on signal at anytime for commercial vessels. When the drawspan is open for a commercial vessel, waiting pleasure craft must be passed.

[USCG-2001-10881, 71 FR 70312, Dec. 4, 2006]

### §117.969 Lavaca River.

The draws of the Union Pacific railroad bridge, mile 11.2, and the highway bridge, mile 11.2, both at Vanderbilt, shall open on signal if at least 48 hours notice is given. In emergencies, the draws shall open as soon as possible.

## §117.971 Neches River.

(a) The draw of the Kansas City Southern automated bridge, mile 19.5, at Beaumont, is not constantly manned and is operated from a remote site in Shreveport, Louisiana. The bridge is normally maintained in the closed to navigation position, providing 13 feet of vertical clearance

above mean high tide. This bridge will open on signal.

- (1) Mariners may request a bridge opening at anytime via one of the following methods:
  - (i) Telephone at 1-800-892-6295;
- (ii) Marine radio on VHF-FM Channel 16; or
- (iii) Proper sound signal as prescribed in \$117.15.
- (2) When signaling by sound, if return sound signal is not sent from the remote bridge operator, in compliance with §117.15, contact the remote operator via telephone or marine radio.
- (3) An audible warning siren will sound when the bridge is in motion. Video cameras will constantly monitor the waterway near and under the draw. Once a vessel has passed through the bridge, the draw will lower, provided the infrared "under bridge" presence detector and video cameras reveal nothing under the draw.
- (b) The draw of the Burlington Northern Santa Fe railroad bridge, mile 53.9 at Evadale, need not be opened for the passage of vessels.

[CGD 82–025, 49 FR 17452, Apr. 24, 1984, as amended by CGD 08–00–026, 65 FR 71059, Nov. 29, 2000; USCG–2011–0257, 76 FR 31837, June 2, 20111

### §117.975 Old Brazos River.

The draw of the Union Pacific railroad bridge, mile 4.4 at Freeport, shall be maintained in the fully open position, except for the crossing of trains or for maintenance.

### §117.979 Sabine Lake.

The draw of the S82 bridge, mile 10.0 at Port Arthur, shall open on signal; except that, from 9 p.m. to 5 a.m., the draw shall open on signal if at least six hours notice is given to the Maintenance Construction Supervisor or the Maintenance Foreman at Port Arthur.

# §117.981 Sabine River.

See §117.493, Sabine River, listed under Louisiana.

[CGD 92-015, 57 FR 37880, Aug. 21, 1992]

# §117.984 San Bernard River.

The draw of the Union Pacific railroad bridge, mile 20.7 near Brazoria, shall open on signal; except that, from